

Sprayer

6875-9Q-80CP

NO	Part NO.	Part Name	QTY
1	0508-A2-5400	Spring	1
2	0770-9C-5101	Gasket	1
3	0770-WL-7529	Mesh Cover	1
4	0771-WP-68CP	Connector	1
5	0875-9Q-22CJ	Sprayer Body	1
6	0875-QA-68CP	Sprayer Button	1
7	0875-QJ-68RB	Inner Tube Adaptor	1
8	0875-QK-7500	Plastic Spacer	1
9	0920-AU-7900	Mesh Filter Gasket	1
10	0875-QB-68RB	Sprayer Button Adaptor	1
11	6875-PA-8000	Shaft & L-Plate	1
12	C108-00-5101	O-Ring	2
13	D058-00-5100	Rubber Gasket	1
14	E063-00-5400	Stainless Steel Washer	1
15	0874-Y4-5117	Sealing	1
16	0875-PB-5400	Central Shaft	1
17	0875-QH-68RB	Retaining Nut	1
18	0875-QL-68RB	Retaining Spacer	1
19	C158-00-5101	O-Ring	1
20	C164-00-5101	O-Ring	1
21	G027-00-77CP	Sprayer Outer Tube	1
22	G028-00-5400	Sprayer Inner Tube	1
23	M030-00-5400	Spring	1

